
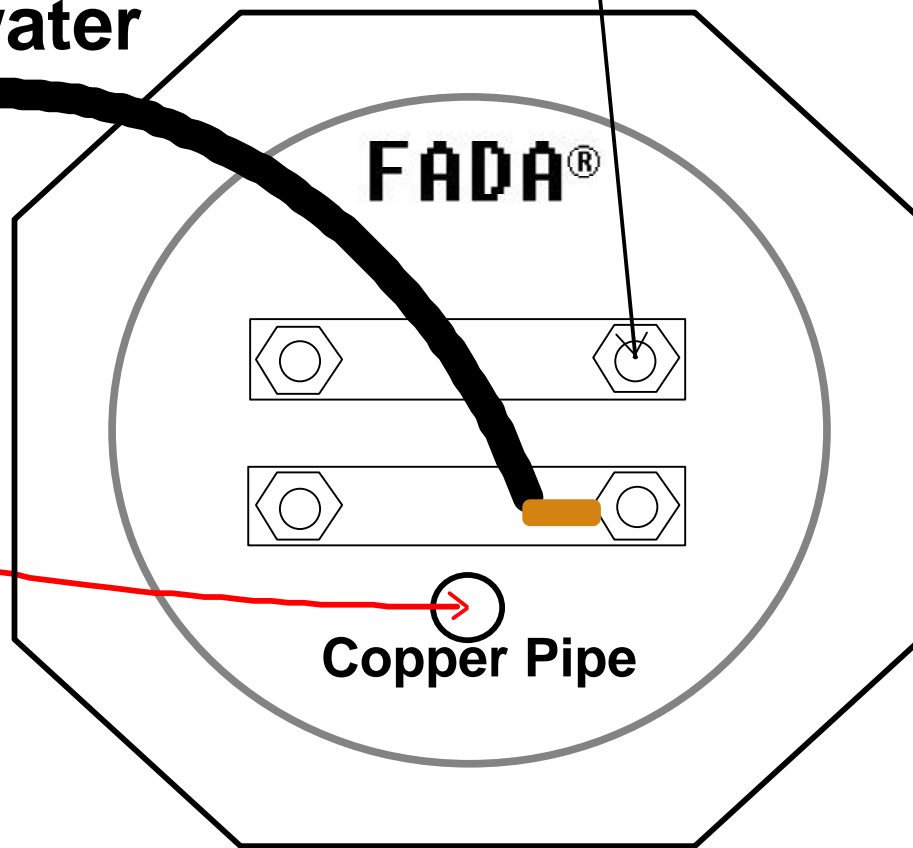


**Connect to Line 2
Directly**

**Install Cut-Out to protect
your heating element
when no water**

**Connect to Line 1
Directly**

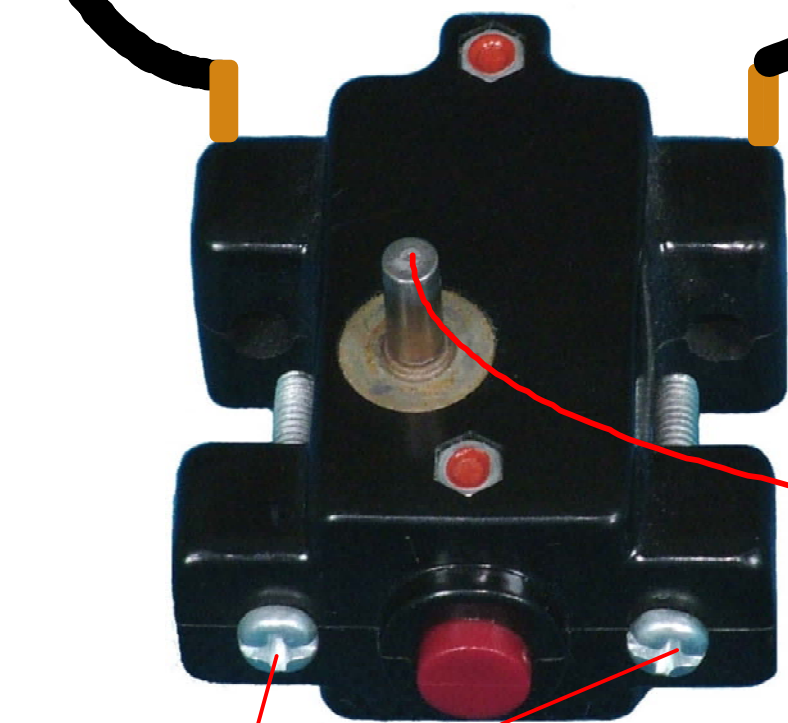

**Take out two screws first.
Then wiring like the picture.
Insert the plug in to the copper pipe.
Use that two screw to assembly the Cut-Out with the box**

**Becareful the Cut-Out body is broken
by two screws driving**

[HTTP://WWW.FADA.US](http://www.fada.us)